

Connector Installation Instruction




for RG58 connector(crimp type)

No.: HX-17-0015_EN

Revision: A/0 2017.04


| | |
|--|--------------------|
| Please read the instruction carefully before installation. Any improper operation can result in badness influence and sequel. (Suitable Cable) : RG58、RG223、PLMR200、PLMR195 | |
| Series | N |
| Suitable connector type | NM-RG58 NF-RG58 |

1. Structure of Connector and crimping barrel:

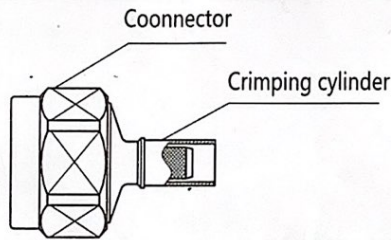


2. Decorticate:

Stripping according to the Dimensions shown in the picture.

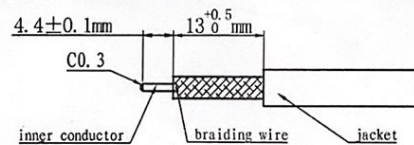


3. installation steps:


1) Put the inner conductor into the welding hole, then weld with the tin wire and solder iron.

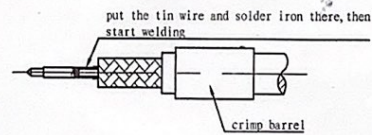

2) Valgus the braiding, then insert the connector to the stripped cable along the direction in the picture.

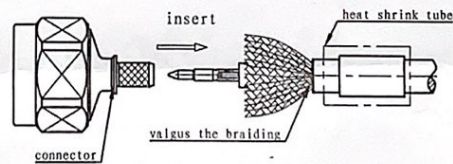

3) Push the crimping barrel onto the braided wire covering, and then crimp the connector with the crimp tool(0.213 in), then heat seal the tube.
Note: the shape of crimping barrel will turn into standard hexagon from round.

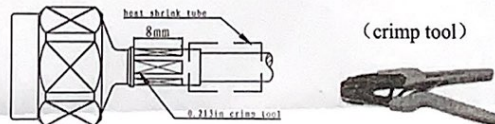

Service hotline: 86-510-87497950 86-510-87491477 Fax: 86-510-87491427

Web: www.hengxin.com

Add: NO.138 Taodu Road, Yixing City, Jiangsu Province, China 214222

