


## 电缆安装说明 (Cable Assembly Instructions)


NM straight type connectors for flexible cable



## Cable trim Dimensions

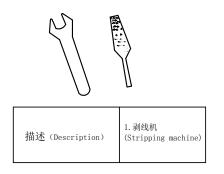

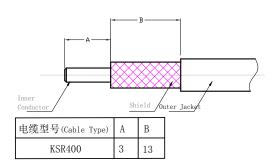


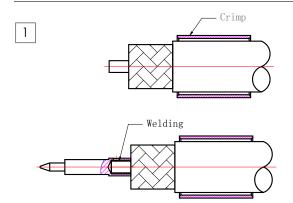

Peel off the cable as shown in the picture

Thread the crimping tube onto the cable


Welding inner conductor

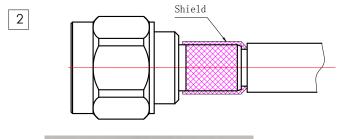

Push the above components into the main body, trim the shielding layer, and push up the crimping tube





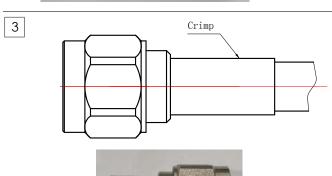

Insert the crimping tube into the shell and use a clamping tool to clamp the square (recommended clamping size 10.5)

