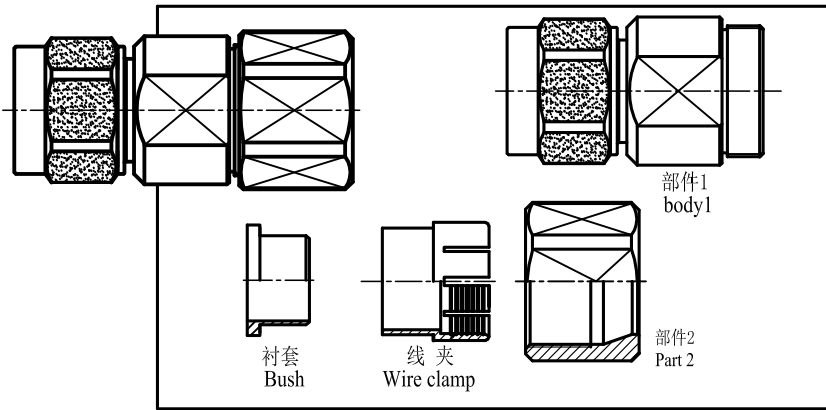
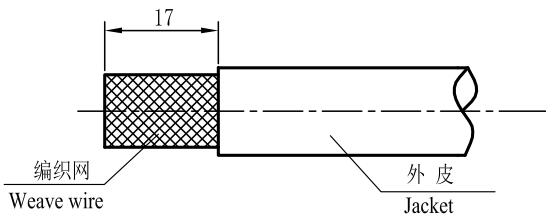
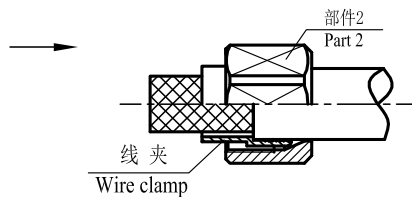
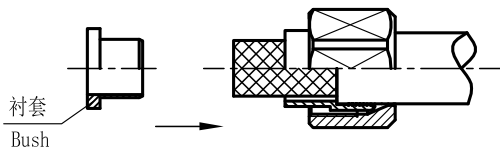
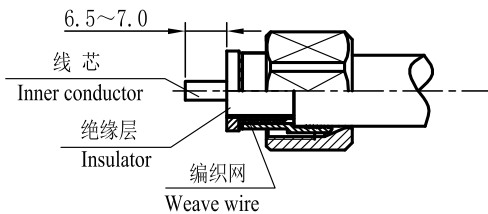
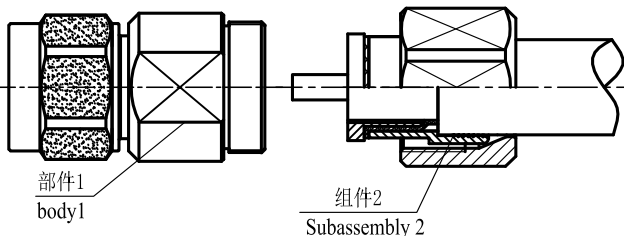
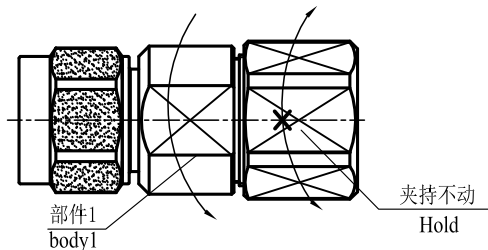


NM-KSR600 安装电缆说明书

NM-KSR600 Assembly instruction

连接器型号: Connector types:	NM-KSR600	配接电缆: Suitable cables:	KSR600 cable
所需工具和原材料: /Tools and materials required 刀片: /Scissors blade 剥线器: /Cutting tool 毛刷: /The hair brushes 呆扳手 19、21 /Spanner 19mmAF and 21mmAF	 <p>部件1 body1</p> <p>部件2 Part 2</p> <p>衬套 Bush</p> <p>线夹 Wire clamp</p>		
1. 如图所示剥线(剥外皮) As shown by stripping (strip jacket)	 <p>17</p> <p>编织网 Weave wire</p> <p>外皮 Jacket</p>		
2. 收拢编织网, 然后在电缆上依次套入部件2、线夹 Furl weave wire, then slide the Part 2, wire clamp onto the cable in turn	 <p>部件2 Part 2</p> <p>线夹 Wire clamp</p>		
3. 将屏蔽层折起, 沿着绝缘层插入衬套 Fold the weave wire, slide the bushing onto the cable along the outside surface of dielectric.	 <p>衬套 Bush</p>		
4. 衬套和线夹夹紧编织网后, 剪去多余的编织网和绝缘层; 线芯尺寸如下 Tightly push the bushing against Wire clamp, cut the unnecessary weave wire and insulator, keep inner conductor as below:	 <p>6.5~7.0</p> <p>线芯 Inner conductor</p> <p>绝缘层 Insulator</p> <p>编织网 Weave wire</p>		
5. 将装配好的组件2与部件1互配旋紧。 Tightly screw subassembly 2 together with body 1.	 <p>部件1 body1</p> <p>组件2 Subassembly 2</p>		
6. 扳紧时, 仅旋转部件1, 不能转动组件2。 When tightening, just screw body 1 and must hold subassembly 2	 <p>部件1 body1</p> <p>夹持不动 Hold</p>		

安装注意: 安装时保证各端面清洁, 无毛刺, 金属屑.

Attention: Metal shaving or impurities on the contact area must be removed.