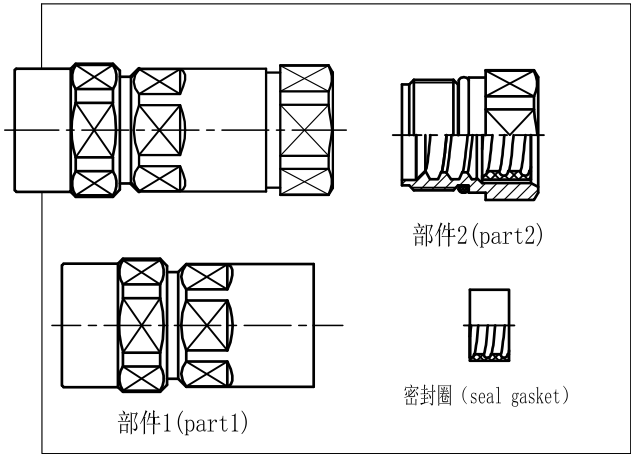
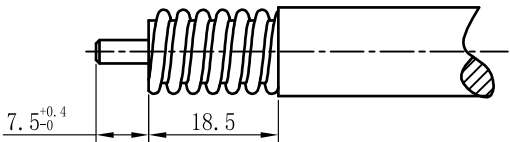
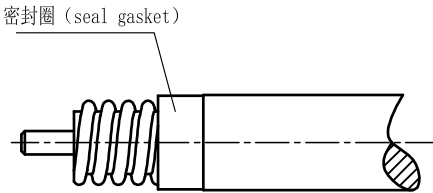
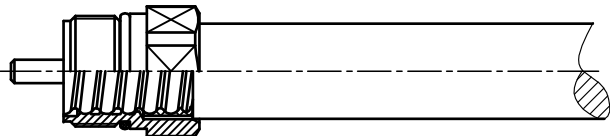
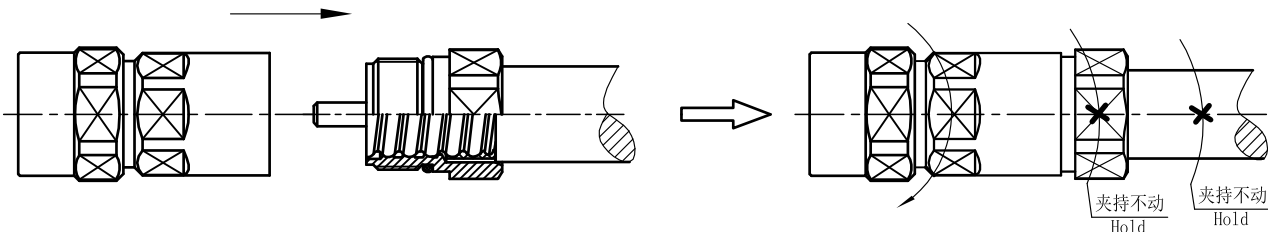


NM-1/2S 装配说明书

NM-1/2S Assembly instruction

连接器型号 /Connector types	NM-1/2S	配接电缆 /Suitable cables	1/2" super-flexible cable
<div>所需工具 /Tools required</div> <div>①刀片: /Scissors blade</div> <div>②剥线器: /Cutting tool</div> <div>③毛刷或高压气枪: /brush or high-pressure air gun</div> <div>④18、16和17呆扳手: /Spanner 18mmAF、16mmAF and 17mmAF</div>		<div></div>	
<div>安装注意:安装时保证各端面清洁,无毛刺,金属屑. /Attention: Metal shaving or impurities on the contact area must be removed.</div>			
<div>1. 按照如图所示的尺寸剥线 /Prepare cable according to dimension 不要损坏电缆的中心导体和螺纹管 /Do not damage the helix outer conductor and inner conductor of cable 用平锉锥削内导体末端 /Taper the inner conductor with flat file</div> <div></div>		<div>2. 将密封圈套在电缆外导体上(如图示位置) /Slide the seal gasket onto the cable, it in the helix outer conductor as shown in fig.</div> <div></div>	
<div>3. 将件2拧到电缆的螺纹外导体上, 如至图示位置 / Thread part2 onto the helix outer conductor until it stops as shown in fig. 用毛刷去除电缆端口的铜屑、毛刺等. / Clean the cable end with brush, keeping no copper bits, burr etc.</div> <div></div>			
<div>4. 扳紧部件1和件2, 同时部件2与电缆夹持不能转。 /Tighten part 1 and part 2, also must holding part 2 and cable which can't be rotated.</div>		<div></div>	