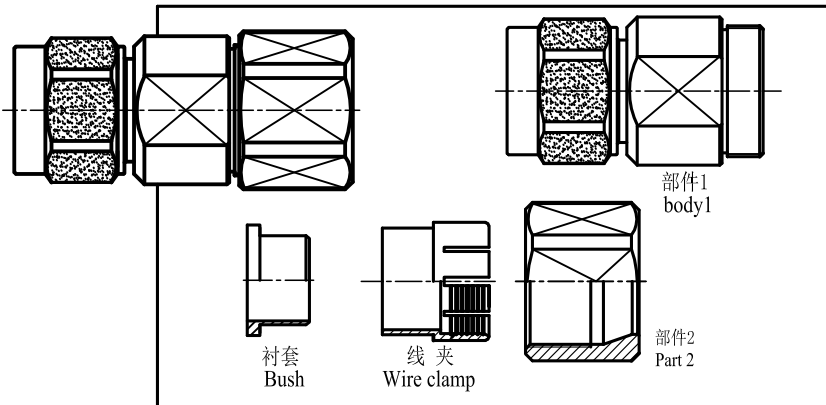
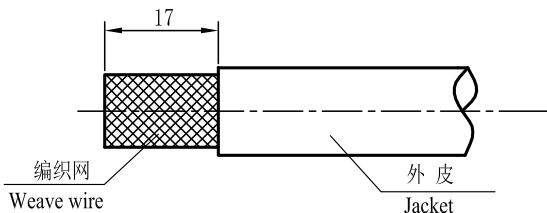
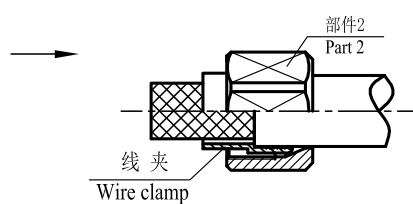
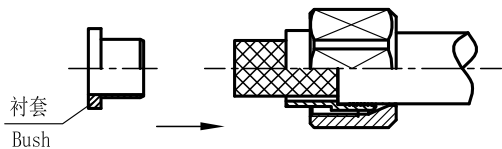
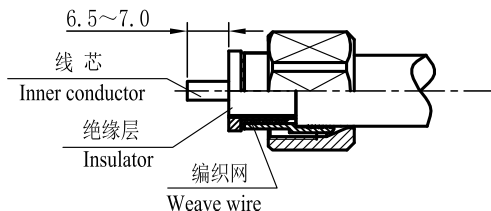
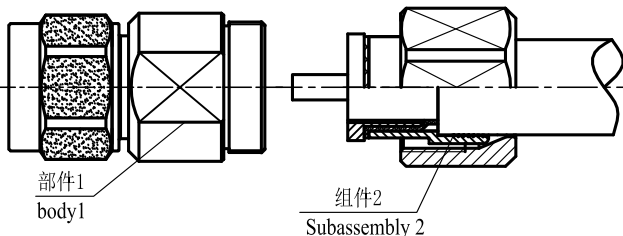
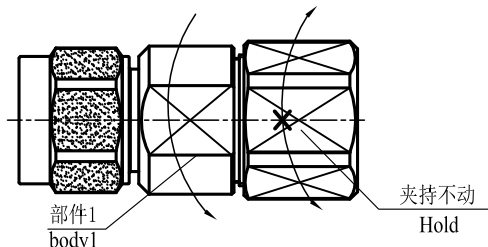


NM-KSR600 安装电缆说明书

NM-KSR600 Assembly instruction

连接器型号: Connector types:	NM-KSR600	配接电缆: Suitable cables:	KSR600 cable
所需工具和原材料: /Tools and materials required 刀片: /Scissors blade 剥线器: /Cutting tool 毛刷: /The hair brushes 呆扳手 19、21 /Spanner 19mmAF and 21mmAF	 部件1 body1 部件2 Part 2 衬套 Bush 线夹 Wire clamp		
1. 如图所示剥线(剥外皮) As shown by stripping (strip jacket)	 17 编织网 Weave wire 外皮 Jacket		
2. 收拢编织网, 然后在电缆上依次套入部件2、线夹 Furl weave wire, then slide the Part 2, wire clamp onto the cable in turn	 部件2 Part 2 线夹 Wire clamp		
3. 将屏蔽层折起, 沿着绝缘层插入衬套 Fold the weave wire, slide the bushing onto the cable along the outside surface of dielectric.	 衬套 Bush		
4. 衬套和线夹夹紧编织网后, 剪去多余的编织网和绝缘层; 线芯尺寸如下 Tightly push the bushing against Wire clamp, cut the unnecessary weave wire and insulator, keep inner conductor as below:	 6.5~7.0 线芯 Inner conductor 绝缘层 Insulator 编织网 Weave wire		
5. 将装配好的组件2与部件1互配旋紧。 Tightly screw subassembly 2 together with body 1.	 部件1 body1 组件2 Subassembly 2		
6. 扳紧时, 仅旋转部件1, 不能转动组件2。 When tightening, just screw body 1 and must hold subassembly 2	 部件1 body1 夹持不动 Hold		

安装注意: 安装时保证各端面清洁, 无毛刺, 金属屑.

Attention: Metal shaving or impurities on the contact area must be removed.