



电缆安装说明 (Cable Assembly Instructions)

SMAM straight type connectors for flexible cable

Assembly Tools




| | |
|------------------|------------------|
| 描述 (Description) | 1. Peeling knife |
| | 2. Pinchers |
| | 3. Soldering tod |
| | 4. Knife |

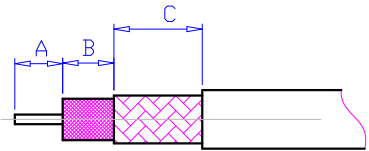


| Cable Type | A | B | C |
|------------|---|---|---|
| KSR240 | 3 | 2 | 9 |

1

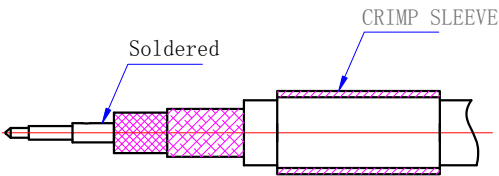


Strip the cable as picture put crimp sleeve on cable.
Solder the center contact to core wire.

2

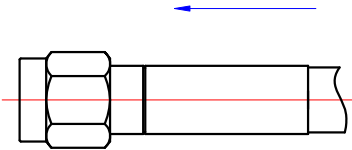

Push above patrs to the body in place.
Trim shielding braids and cover it to crimp sleeve.

3



Crimp the crimp sleeve with crimp tool.
Crimp tool with 6.5mm hex dies.