




## SMAMRA Connectors for KSR195 Coaxial cable

SMAMRA 型配接 KSR195 电缆连接器

SMAMRA-KSR195 Connector

SMAMRA-KSR195 连接器

零部件清单 /Parts list

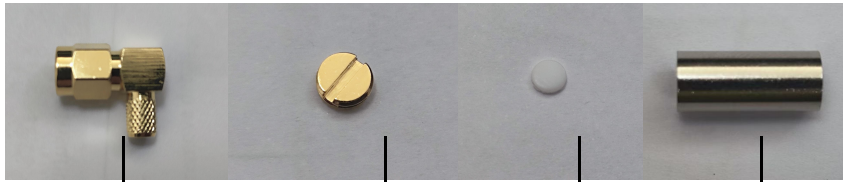

1、连接器主体  
Connector body



2、盖板  
Cover



3、绝缘垫  
Insulator



4、压接管  
Crimp


### 安装步骤:

### Assembly Steps




**1** 按剥线尺寸，用剥线机剥线，并整理电缆屏蔽层。

Cut jacket by knife by stated dimension and trim cable braid.

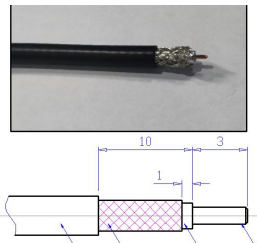

**2** 将压接管“4”穿在电缆上。

Slide the crimp “4” onto the cable.


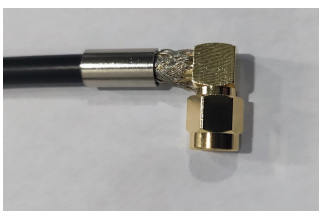


**3** 将电缆插入主体“1”中，并将芯线用

电烙铁焊接到内导体上。锡丝推荐尺寸 0.6mm

Insert the cable into the main body "1" and solder the

core wire to the inner conductor with an electric soldering iron.

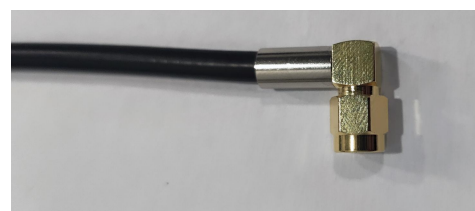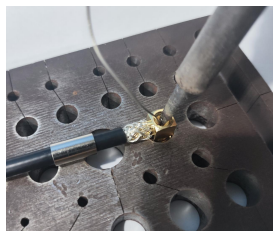


**4** 将压接管“4”套入主体上。

Slide the crimp “4” onto body "1".




## 常州金信诺凤市通信有限公司

Recommended size for tin wire is 0.6mm

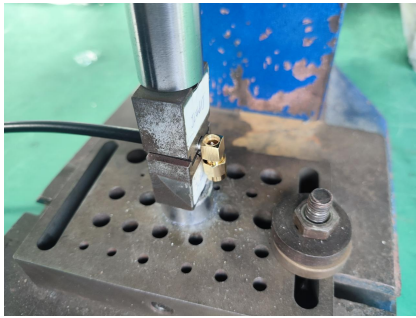

**5** 用压接工装将压接管压方。推荐夹方尺寸 5.9mm。

Use a crimping tool to press the crimping tube onto the square. crimp tool with 5.9mm hex dies.

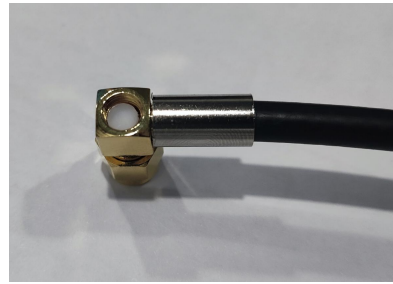

**6** 将绝缘垫“3”放入主体上。

Place the insulation "3" onto the main body.



**7.**将盖板“2”涂上螺纹胶旋入主体上。

Apply thread glue to cover "2" and screw it onto the main body